


OPERATION MANUAL
MODEL SK-252
pH / ORP CONTROLLER

TABLE OF CONTENTS

1. GENERAL DESCRIPTION
2. SPECIFICATIONS
3. INSTALLATION
 - A. FIRST THING
 - B. MOUNTING
 - C. WIRING POWER TO CONTROLLERS
 - D. HOW TO CONNECT PUMPS OR SOLENOIDS
 - E. FIGURE 1 - WIRING DIAGRAM
 - F. DIMENSIONS & CUTOUTS
4. OPERATION
 - A. FIGURE 2 - FRONT PANEL
 - B. KEY PAD OPERATION
 - C. PROGRAMMING
 1. HOW TO CHANGE THE SET POINT
 2. HOW TO PROGRAM THE CONTROL ACTION
 3. HOW TO PROGRAM THE HYSTERESIS
5. CALIBRATION
 - A. pH CALIBRATION
 - B. ORP CALIBRATION

WARNING

 **WARNING:** This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

1. GENERAL DESCRIPTION

The Model SK-252 is a 1/16 DIN microprocessor based, on-off controller for pH or ORP. It accepts any combination electrode for an input and has a relay, or SSR, or 4-20mA control signal for an output. All functions are programmable from the front panel, programmed values remain in memory when the power is turned off. Dual digital displays indicate the process value (pH or ORP) and the control set point. The process value is displayed in RED and the set point in GREEN. The power supply is universal and operates on 100 to 240VAC, 50/60Hz. Automatic temperature compensation terminals on the pH controller allow this to be performed with a 1000 ohm pt. sensor, or manual with fixed resistors.

2. SPECIFICATIONS

Model	SK-252-pH	SK-252-ORP
Range	0 to 14.00pH	-1000 to +1000mV
Resolution01 pH	1 mV
Accuracy	± .2pH	± .02% of span
Dead band	Front panel adjustable 0 to 50% of span	
Main Output Relay	S.P.D.T. Relay 3 Amp @ 115VAC, Resistive Load	
Power	100 to 240VAC Hz @ 3 Watts	
Operating temperature range ..	-10 to +50°C	
Storage temperature range.....	-20 to +60°C	
Display	4 Digit red LEDs (pH, ORP), 4 Digit green LED's (Set Point)	
Dimensions	48 x 48 x 78.8 mm (1/16 DIN)	
Memory	Non-volatile	

3. INSTALLATION

A. First Things

Upon receiving your order of SK-252 controller, check to verify that the part number and quantities agree with the enclosed packing slip. If any discrepancies exist, be sure to contact customer service immediately.

Inspect all controllers for damage. Check for damaged boxes, scratches on the controller's enclosures and face plates, or any damage that may exist due to improper handling. If such a case exists, save the shipping carton and shipping material, and contact your shipping agent immediately.

B. Mounting

To flush mount your controller, first verify that the depth of your cabinet will accommodate the length of your instruments. Also verify that where the controllers are to be mounted, there are no corrosive gasses present and no vibration, impact, water, or extreme temperature exposure. Once verified, follow the diagrams below and cut the correct size hole from the cabinet's panel; the panel should be between 1 and 8 millimeters thick. Insert each unit through the front of the panel. The controller's bezel should catch and not feed through the cut out. When the controller is properly fitted in the panel, slide the plastic mounting clamp in place and tighten the clamp screws for a firm fit.

C. Wiring Power to Controllers

AC power is to be connected to the power input terminals located on the back of your SK-252, refer to the wiring diagram in the manual or on the side of the controller for the correct terminals. Your power connections should be made with 18 gauge or larger insulated wire. A 3 amp fuse should be connected in series with power and your controller to help eliminate any problems which could occur due to an over current situation. The SK-252's unique power supply circuit, incorporating a free voltage transformer accepts line voltages between 100 and 240 VAC; no need to change your wiring to accommodate voltage differences within the rated voltage range.

D. How to Connect Pumps or Solenoids

The main control relay is programmed to turn on when the input is above the set point, for a pH control application, wire an (ACID for pH, REDUCTION for ORP) pump or solenoid to the normally open contact, wire the power voltage to the common contact. For (ALKALINE pumping, oxidation for ORP), change the control action so that the relay actuates below the set point as described in the programming section.

4. OPERATION

A. Keypad Operation

1. "SEL" key; changes upper display to the first programming menu, advances the display through the menu and sets the programmed information into memory.
2. "∧" up arrow key, increases value displayed in the green (lower) display.
3. "∨" down arrow key, decreases value displayed in the green (lower) display.
4. Press and hold "SEL" key for approximately 3 seconds and "HYS" will appear in the upper display. Hold the "SEL" key for approximately 6 seconds and P-n1 will appear.

B. Programming

1. How to change the set point
Press and hold the "∧" up or "∨" down arrow until the correct number appears, the new set point will be active after 5 seconds.
2. How to change the control action (Relay activates above or below the set point)
Hold the "SEL" key for approximately 6 seconds and "P-n1" will appear in the upper display, the control code will appear in the lower display, "0" or "1" will actuate below the set point, "2" or "3" will actuate above the set point. Press the "SEL" switch once, the value will flash, change the value with the "up" or "down" keys, and press the "SEL" key again to set it in memory. Holding the "SEL" key for approximately 2 seconds will return to normal operation.
3. How to program Hysteresis
Hold the "SEL" key for approximately 3 seconds and "HYS" will appear in the upper display, the hysteresis amount will appear in the lower display, press the "SEL" key once and the amount will flash, change the amount to the desired value with the "up" or "down" keys, press "SEL" again to set it in memory. Holding the "SEL" key for approximately 2 seconds will return to normal operation.

5. CALIBRATION

A. How to calibrate pH


The front panel has two adjustments labeled "CAL" and "SLOPE", always adjust the CAL first. Place the pH electrode in a #7.00 buffer solution, wait for the reading to stabilize and adjust the SLOPE for a reading of 4.00. Calibration complete.

B. How to calibrate the ORP


The front panel has two adjustments labeled "ZERO" and "SPAN", the ORP controller can be calibrated with a millivolt source substituted for a probe.

Short the input connector and adjust the ZERO adjustment for a reading of 0000. Apply +500 mV from an accurate millivolt source and adjust the SPAN adjustment for a reading of 0500.

To verify the accuracy of the ORP probe and ORP calibration, a kit is available from the manufacturer, it consists of enough materials to do 30 tests, it contains reagents, stirrers beakers and instructions.

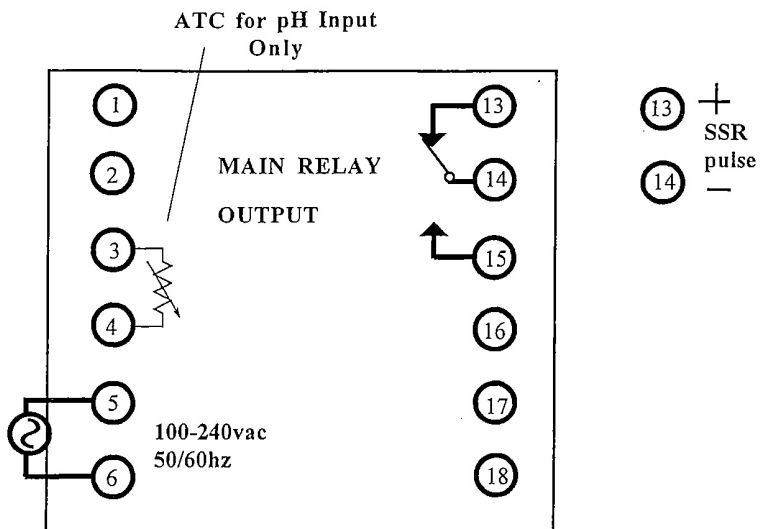


wiring diagram

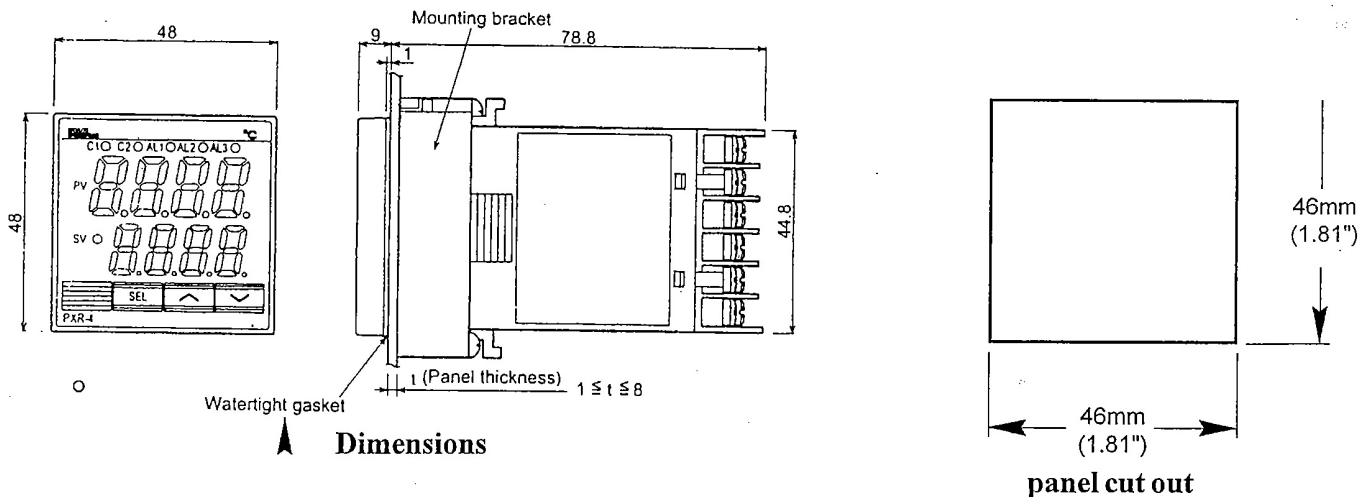

Dimensions

panel cut out

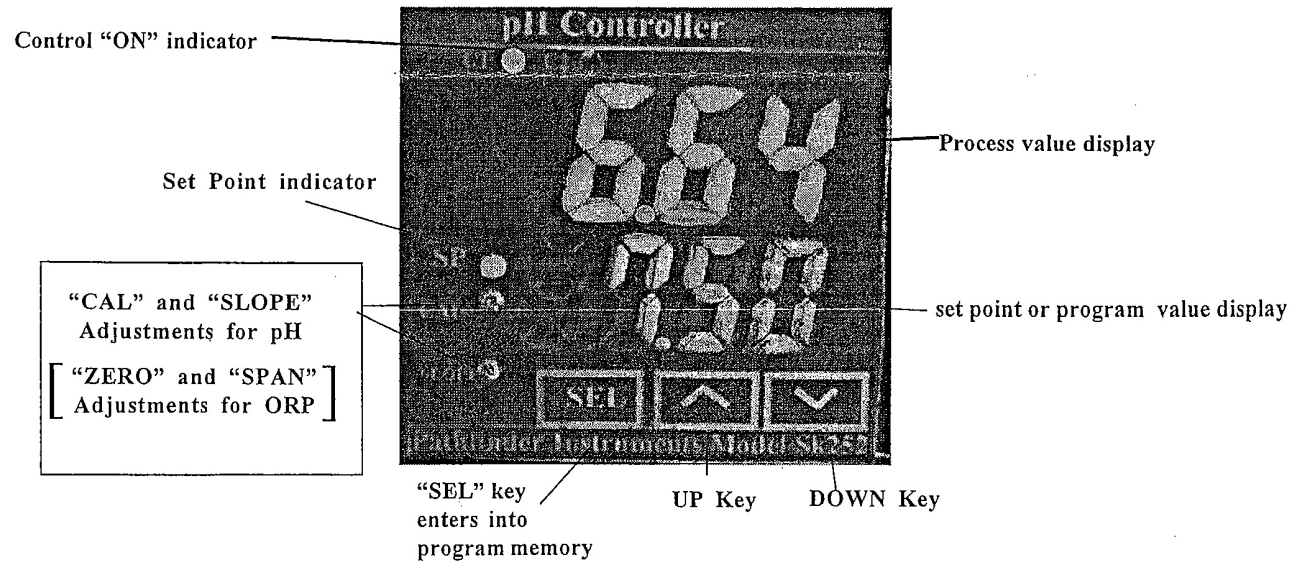

Front Panel